



Windows & Doors

STANDARD WINDOWS

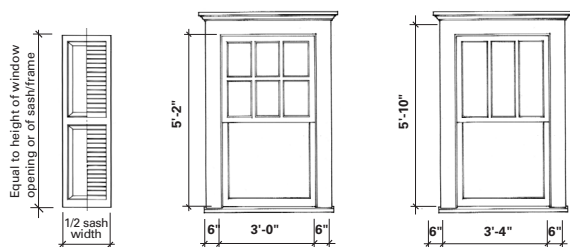

Second floor

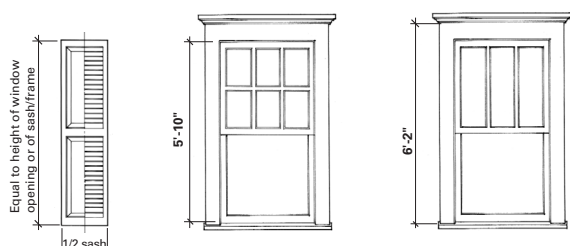

First floor

Standard Windows

Windows are typically vertical in proportion and have a 3 over 1, 4 over 1, 6 over 1, or 9 over 1 muntin pattern. Standard windows are double hung.

Special Windows

Special windows include paired or triple windows, small square accent windows, and box bay windows supported on wood brackets. Broad, horizontal windows divided into several panes occur in dormers and gables. Other dormer windows are ganged together in wide gabled or shed dormers.


Doors

Arts & Crafts doors are often stained wood with either wood plank design or a panel door with the top half glazed. Doors may have sidelights or transoms in clear or leaded glass in Arts & Crafts patterns.


Trim

Windows and doors have 6-inch straight or tapered flat trim. Arts & Crafts window and door trim carries a simple molding and cap above.


SPECIAL WINDOWS

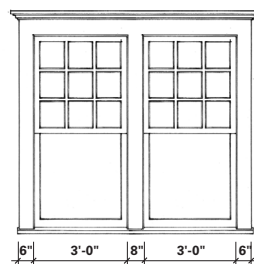


Double window

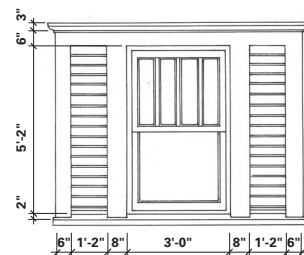


Gable end window

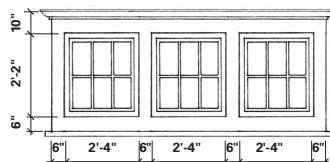

Accent windows

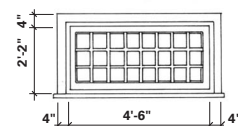


Dormer accent


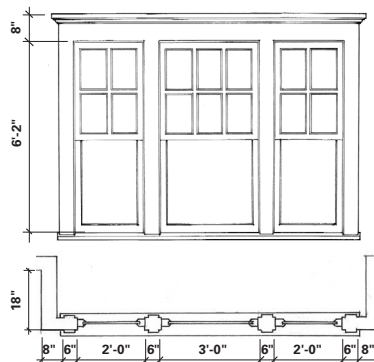


Box bay elevation and plan

TYPICAL WINDOW DETAIL

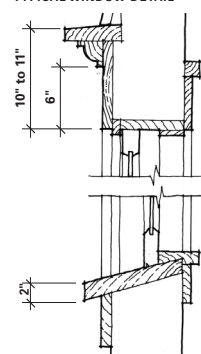

DOORS

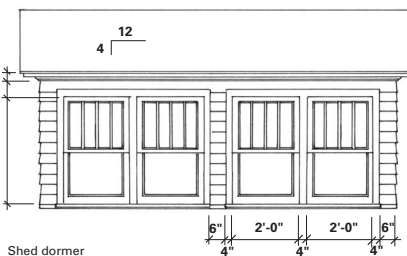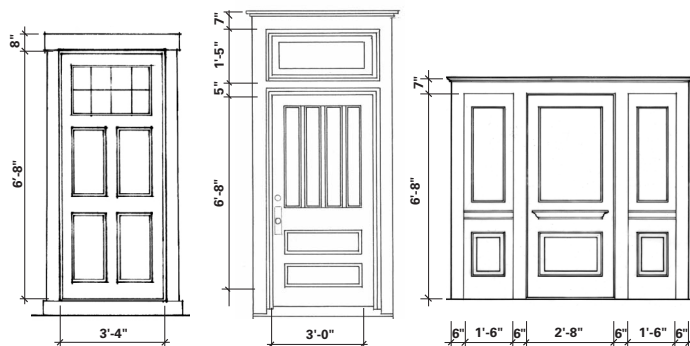

Shed dormer

